

A-Tach # 50250



Designed for: Chevrolet Corvette 2026 - 20__

STL-1


A-Tach
Mounts

NOTICE: The product has been tested to fit securely to the listed vehicles. Instructions are provided for your convenience. You are responsible for the use of the product and determine if you have the skill to attach the product without causing damage to your vehicle or the product. A-Tach Mounts will not be responsible for any damage to the vehicle due to the installation and/or use of the product.


Read all the instructions and view the photos before attaching this product.

Online instruction can be found on the product page – Or at link:

<https://www.atachmounts.com/assets/images/PDF%20-%20Instructions/50250%20-%20Instructions.pdf>

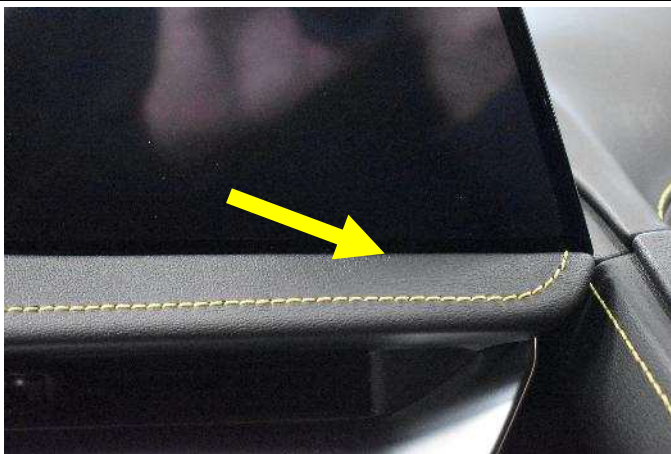

(1) Clean the area where the mount will be attached. The upper edge of the mount will attach into the seam between the display and padded center dash panel illustrated with the arrow in the photo above.

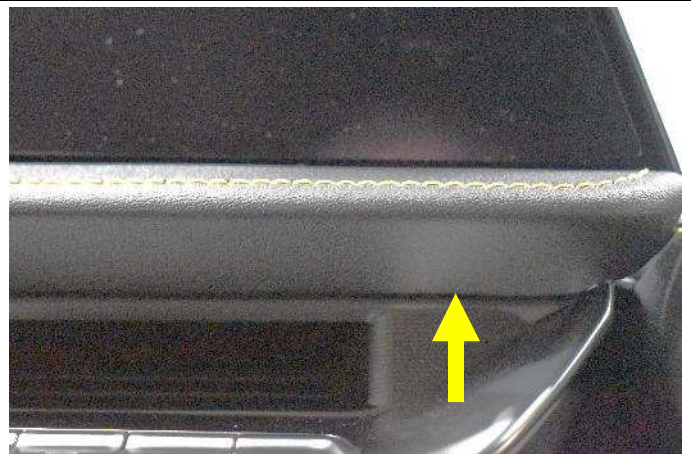

(2) The lower edge of the mount will attach into the seam between the padded center dash panel and panel below surrounding the center vents illustrated with the arrow in the photo above.

See additional instructions on the back side.

NOTICE: PLEASE READ THIS INFORMATION

Attach the mount first or **BEFORE** attaching the device holder to the vehicle mount to ensure there is a secure and proper fit onto the vehicle and to your satisfaction. **Once the mount is screwed into or the pre-drilled holes enlarged in any way, the mount is considered used and is not refundable.** Most often the mount will appear to be a little too big or small for the intended location. It is designed this way and will not break when flexing into place.

WARNING: PROTECT from extreme heat conditions.
Extreme heat can damage the device and the mount.


Extreme temperatures can have a big impact on dash panels, cell phones, cell phone mounts and almost anything placed in the vehicle. A car windshield can also have a magnifying effect when it comes to heat on a dash, so we like to remind customers with a warning to avoid this happening when possible. A sun reflector in the windshield or park in the shade are a couple ideas that will help with extreme heat concerns.

Additional Instructions



(3) Carefully press the mount onto the padded center dash panel. The angled side of the mount should be on the lower side.

Use the seam tool if needed to open the seam a little.

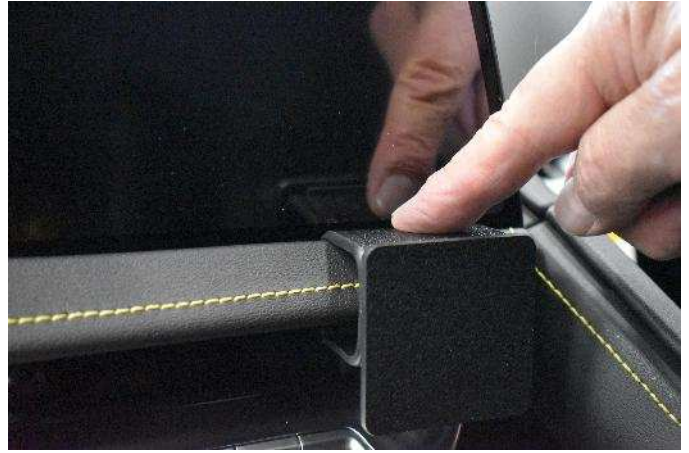

(4) Press the upper edge of the mount all the way into the upper seam illustrated with the arrow in the photo above.



(5) Press the lower mount forward and all the way into the lower seam. Use the seam tool if needed to open the seam a little.



(6) The mount attached. The tape will not leave any residue if the mount is removed in the future.

A-Tach Mounts Returns and Warranty link:

https://www.atachmounts.com/Warranty>Returns_ep_42-1.html

There is also a link at the bottom of every page on our website.

If you have questions, contact A-Tach Mounts cs@atachmounts.com / ATachMounts.com